


How to assemble a Network Relay Device

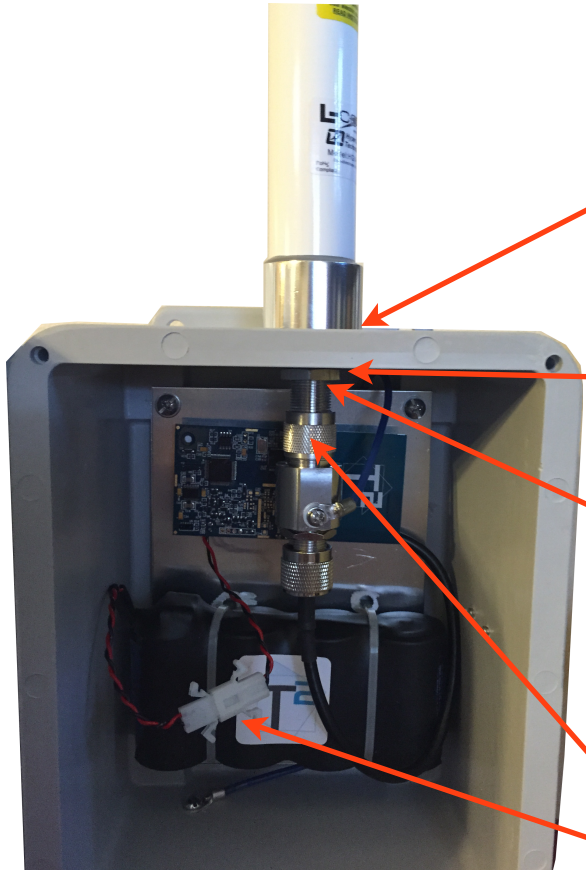


1. Rubber Washer



2. Locking Washer



3. Threaded antenna nut

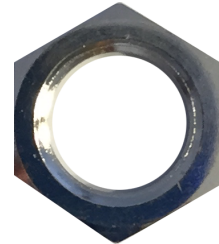

4. Antenna Connector

5. Battery Connector

Assembling a NRD is not complicated, but there are a couple things to be noted.

1. Before inserting the antenna, the rubber washer should be placed at the bottom of the antenna so once inserted it is between the antenna and the box on the exterior.
2. Once antenna is inserted put the locking washer on first over the threaded base of the antenna.
3. Next thread on the antenna nut to secure the antenna to the box. Make sure the nut is tight enough to create a seal at the rubber washer.
4. Next connect the antenna connector
5. Lastly, connect the battery to the radio board and install at predetermined location.

www.abtwater.com

2836 S. Bartells Drive, Beloit, WI 53511 USA
800-697-9096 608-313-8781 (fax) 608-313-8791